SENSING

SL-SETTING COMMISSIONING KIT





SI

PARAMETERS OF SENLAB™ SENSORS.

Besides the possibility of changing Senlab[™] sensors factory settings over-the-air once the product is installed, SL Setting commissioning kit allows to change them contactless :

ING IS THE ESSENTIAL TOOL TO CONFIGUR

- In the workshop before shipping or installation
- Directly on the field once installed

SL Setting commissioning kit is a tool that makes use of the local UHF connectivity embedded within the Senlab[™] sensors. It is available in two versions : a windows PC version and a lighter Android version dedicated to field operation. (Note that a Linux version is also available on request).



www.sensing-labs.com

SENSING

SL SETTING IS MADE UP WITH A USB UHF READER AND A SOFTWARE PROGRAM

REFERENCES	SLS-LAB-6NN1	KIT-LAB-7NND
PREREQUISITES & CONTENT	PC VERSION ANDROID VERSION	
Operating system (OS)	Windows 10, Windows 8.x, Windows 7	Android 5.0 Lollipop or greater
Connectivity	USB2 typeA male 0.8m cable provided	USB2.0 OTG micro-B male 1m cable provided
Content	 Support with integrated magnet and RFID reader, to facilitate product positioning and configuration. 0.8m USB 2.0 cable for connecting the hardware to the PC SL Setting software for PC on USB key with licence 	 RFID reader with fixing element 1m USB 2.0 OTG cable for connecting the player to the android device. SL Setting app available on Google Play store Licence must be requested to support@sensing-labs.com

CHANGE YOUR DEVICE PARAMETERS IN ONLY 20 SECONDS

AVAILABLE FEATURES	PC VERSION	ANDROID VERSION
Activation type cfg. (ABP, OTAA with AppEUI)	\checkmark	
AppEUI	\checkmark	
Application parameters (datalogging period, alarms settings,)	\checkmark	
Magnet switch off activation/desactivation	\checkmark	\checkmark
Status reading (version, battery level)	\checkmark	\checkmark
Reading of the current value of the sensor	\checkmark	\checkmark
Battery level reset (Indoor only)	\checkmark	\checkmark
Product stopping	\checkmark	\checkmark

KEY FEATURES

((•)) Å	SENLAB [™] NETWORK CONFIGURATION
X	SENLAB [™] MAINTENANCE
	SENLAB [™] APPLICATION CONFIGURATION
	COMMISSIONING DATA EXPORT

www.sensing-labs.com

T : +33 (0)4 67 47 55 67 contact@sensing-labs.com

Sensing Labs - 187 rue Hélène Boucher 34170 Castelnau-le-Lez