

SL-Setting is the tool empowering you with full freedom and autonomy for the configuration of all your Senlab devices (Sensing Labs' LoRaWAN™ sensors), and if used, the SL-Gateway (Sensing Labs LoRaWAN™ gateway solution).



Senlab **Network**
configuration



Senlab **Application**
configuration



Senlab
Maintenance



SLGateway **Setup**

SL-Setting kit is composed with:

A hardware support optimising the position of the devices for the 'sensor to computer' communication link.

A software program giving you access to all the configuration, maintenance

Pre-requisites

Operating system

Windows 10, Windows 8.1, Windows 8, Windows 7

Connectivity

USB-2 or USB-3 port

Only for SL-Gateway
configuration

Direct connection (ethernet cable) to the computer, or same Local Area Network.